























































































































\*1 Cannot use the memory card of UHS-I standard when this microphone is attached, because the noise is recorded.  
\*2 5.1ch MIX mode is not available. \*3 VCT-55LH is required. \*4 VFA-49R1 is required. \*5 DLC-HEU15/30 is required.  
\*6 Zoom microphone mode is not available.

Model		Battery Accessory Kit	Charger AC Adaptor	LCD Protector	EVF / OVf	Flash	Microphone	Hood / Grip / Filter Lens Cap / Cap Holder	Jacket Case	Carrying Case / Wrapping Cloth Shoulder Strap	Tripod Multipod	Remote Control Tripod Remote Commander	Light	Cable Other	
 DSC-RX1R	  	 NP-BX1  ACC-TRBX	 AC-UD10	PCK-LM15	 FDA-EV1MK	 HVL-F60M	 ECM-XYST1M  ECM-W1M*2  ECM-CG50  ECM-GZ1M*6	 LHP-1  TGA-1  VF-49CPAM  VF-49MPAM  ALC-F49S	 LCJ-RXB	 LCS-SL10  LCS-SL20  LCS-U21  LCS-ASB1	 VCT-MP1	 HVL-LE1R1  HVL-LE1  HVL-RL1	 DLC-HEU15/30 DLC-HEU10A/15A/20A/30A (J)  CLM-V55*5		
 DSC-RX1	  	 ACC-TRDCX	 BC-TRX		 FDA-V1K	 HVL-F43M	 ECM-XYST1M  ECM-W1M*2  ECM-CG50  XLR-K1M*3  ECM-GZ1M	 VF-62CPAM  VF-62MPAM  ALC-F62S	 LCJ-RXE	 LCS-SB1					
 DSC-RX10	 MULTI 	 NP-FW50	 BC-QM1  BC-TRW  AC-UD10  AC-PW20		 HVL-F20M	 ECM-XYST1M  ECM-W1M*1*2  ECM-GZ1M*6	 VFA-49R1  VF-49CPAM*4  VF-49MPAM*4  ALC-F49S  AG-R2	 LCJ-RXF	 LCS-WR2AM	 LCS-CSVH  LCS-CSU  LCS-CSJ  LCS-CSW  LCS-CSX  LCS-CSQ				 VCT-R100	
 DSC-RX100M2	 MULTI 	 NP-BX1	 AC-UD10		 FDA-EV1MK	 ECM-XYST1M  ECM-W1M*1*2  ECM-GZ1M*6	 VFA-49R1  VF-49CPAM*4  VF-49MPAM*4  ALC-F49S  AG-R2		 STP-XS3	 VCT-R640	 VCT-VPR1  VCT-VPR10			 HVL-LE1	 FA-SHC1M
 DSC-RX100M3	 	 ACC-TRBX	 BC-TRX		 AG-R2	 STP-XH1	 VCT-R640								
 DSC-RX100		 ACC-TRDCX	 BC-TRX		 VFA-49R1  VF-49CPAM*4  VF-49MPAM*4  ALC-F49S  AG-R2	 STP-XH70  STP-XSG1	 LCS-CSVH  LCS-CSU  LCS-CSJ  LCS-CSW  LCS-CSX  LCS-CSQ		 VCT-VPR100		 DLC-HEU15/30 DLC-HEU10A/15A/20A/30A (J)				
Model		Battery Accessory Kit	Charger AC Adaptor	LCD Protector	EVF / OVf	Flash	Microphone	Hood / Grip / Filter Lens Cap / Cap Holder	Jacket Case	Carrying Case / Wrapping Cloth Shoulder Strap	Tripod Multipod	Remote Control Tripod Remote Commander	Light	Cable Other	